
## **Installation Guide**

## >> 837 Series Adjustable Concealed-Arm Lavatory Carrier

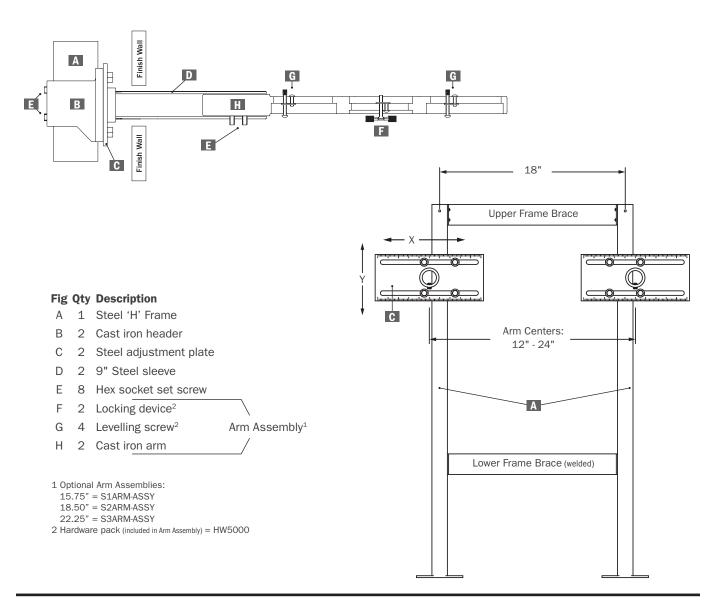

- **STEP 1:** Set frame in correct position and anchor to floor using 1/2" bolts (supplied by others). A minimum of two diagonally placed bolts per upright are recommended for proper installation.
- STEP 2: Verify header coupling elevation (Y) and tighten set screws (2 ea). Adjust width of arm centers (X) per fixture manufacturer's installation instructions. See Illustration.
- **STEP 3:** Assemble upper brace to frame and secure with screws provided
- **STEP 4:** Screw threaded sleeve into the header coupling. Set screws should be located at the bottom. The threaded sleeve may not be fully tightened.
- **STEP 5:** Insert cast iron concealed arm into threaded sleeve when installing fixture. Adjust overall length of arm and tighten set screws in bottom of sleeve.
- **STEP 6:** Position leveling screws and locking device. Install and level fixture and tighten locking device to secure into place.