


PowerBar™

» Mini Strut Bracket



1
Locate holes on bracket and secure bracket to $\frac{3}{8}$ " threaded rod using washers and $\frac{3}{8}$ " nuts. If desired, hardware can be installed both above and below bracket. Install double nut if specified.

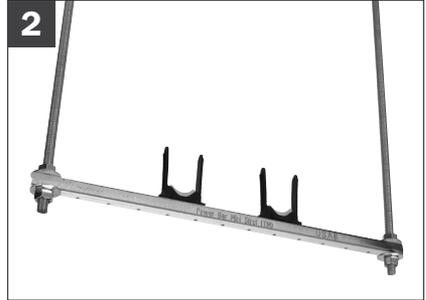

2
Slide TouchDown™ clamps to desired location within the bracket.



3
Position tube or conduit into base of TouchDown™ clamp.



4
Ratchet bridge of TouchDown™ clamp down over both posts evenly.

⚠ **WARNING:** Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Supply

Drainage

Support

Specialties


www.siouxchief.com

TAKE THE FIELD.



PowerBar™

» Mini Strut Bracket



523-3MSS



523-3MSS2



523-3MSL



523-2MS

For larger pipe sizes or when insulation is required, use the TD+™ flat base clamp (purchase separately) and install on the bracket with the screws provided.




550-2111



Additional TouchDown™ clamps can be purchased in bulk and added to the bracket before installing threaded rod. Ideal when running flexible gas lines.



522-5501

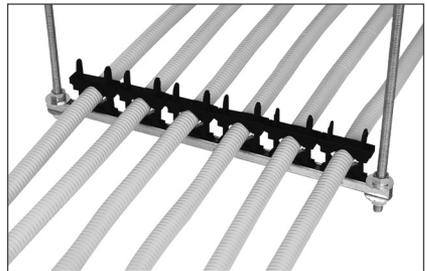

⚠ **WARNING:** Cancer and Reproductive Harm
www.P65Warnings.ca.gov

#IS-523-3MS-TD 06/18

Supply

Drainage

Support

Specialties

www.siouxchief.com

14940 Thunderbird Road
 Kansas City, MO 64147
 P 1.800.821.3944
 F 1.800.758.5950

