


Open  
at  
Corner

# TYPICAL INSTALLATION

- 1 Turn off the gas line to the firebox or, if necessary, the main gas line.
- 2 Determine which side of the firebox the valve will be installed. Drill a 1¼" hole for the flange and valve. Thread the valve into the flange from below the floor or behind the wall.
- 3 Run ½" gas pipe from the valve, and extend approximately 3½" into the firebox if coming from the side, or 1½" if coming from below. Cap off firebox stub with threaded ½" cap.
- 4 Run ½" gas pipe from the gas source to a ½" lever-type ball valve. (This is different from the HearthMaster valve.)
- 5 Run ½" gas pipe from the lever-type ball valve to a ½" gas pipe union.
- 6 Run ½" gas pipe from the HearthMaster valve to the union and thread union together. Test all new pipe connections with a liquid leak detector.

## INSTALLATION NOTES

- Be sure to follow ALL local codes when installing gas and other piping.
- Use only black gas pipe and secure piping every five feet or less.
- Remove any debris from male and female threads before connecting.
- Always use a pipe joint compound or PTFE pipe thread tape on all connections to seal threads.

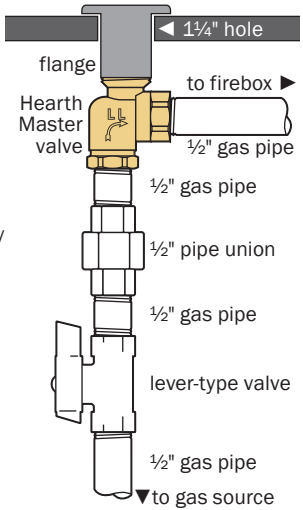

## WARNING

HearthMaster Log Lighter BARS are for use with NATURAL GAS ONLY



UPC/IAPMO listed to meet UPC-2000



AGA/CGA Certified

LIMITED LIFETIME GUARANTEE

1-800-821-3944  
www.siouxchief.com

